



Reel Rack Assembly Instructions

Step 1: Parts Included



1x Tire Cover
4x Rod Tubes
8x Washers, 8x Bolts, 8x Nuts
1x Bracket (2 pcs)


Needed for assembly: Pliers and 9/32 nut driver

NOTE: Nut driver with a 9/32 bit (regular sockets don't fit!).





Step 2: Carefully release the bungee Cord. **Warning: Keep face away when removing and reattaching bungee.** Align the slotted end of the tube to the bracket with the bungee and push in place.

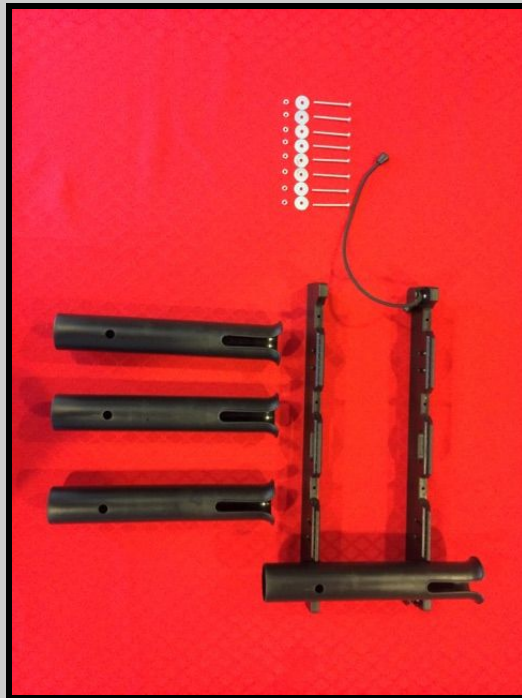


Step 3: Press tubes into place on bracket.





Step 4: Insert bolt in top far right tube and attach to cover in corresponding hole using washer then nut. **Note:** Placing two fingers in tubes will help align bolts in the holes. Leave all nuts loose until all bolts are in place.

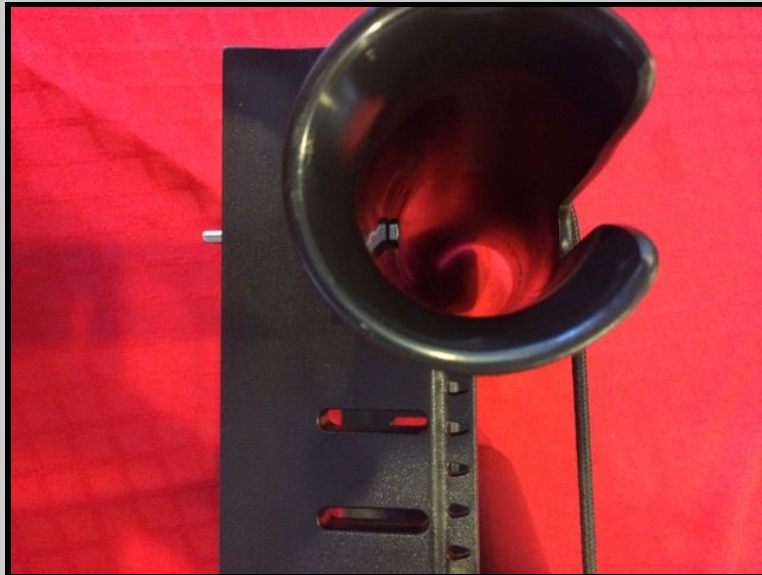


View 1



View 2



Step 5: Insert bolt in bottom far left tube, washer then nut, and continue procedure for other six holes. Hand tighten all nuts.

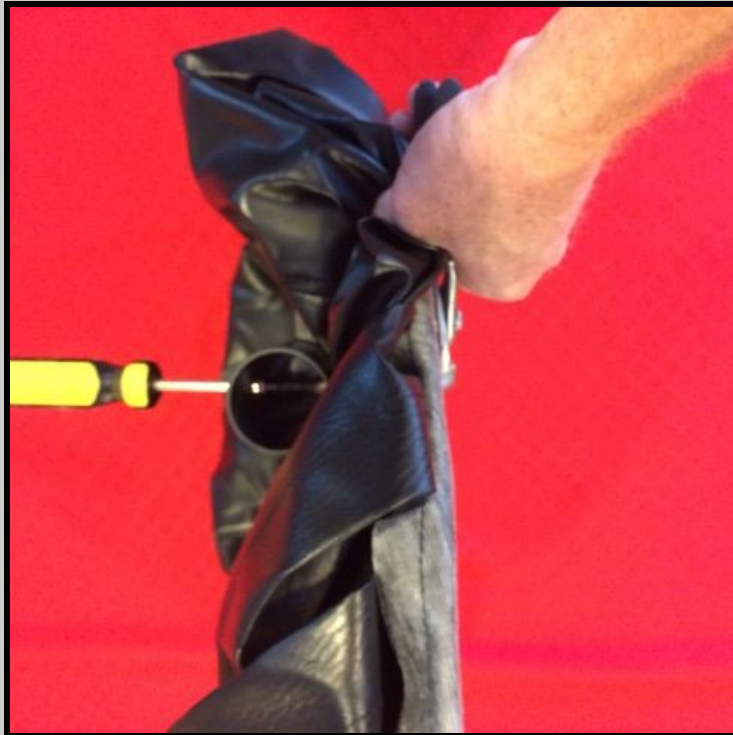

View 1



View 2



Step 6: Reattach retaining bungee. Be sure the cord knob is completely wrapped around the securing mechanism and is visible at the front of the tubes as pictured.



Step 7: Finished Product

